

ANANDA


Help Manual

Motor phase current

The content of this information is subject to change without notice

1. Check the motor phase harness and Hall harness for damage and short circuit.

①

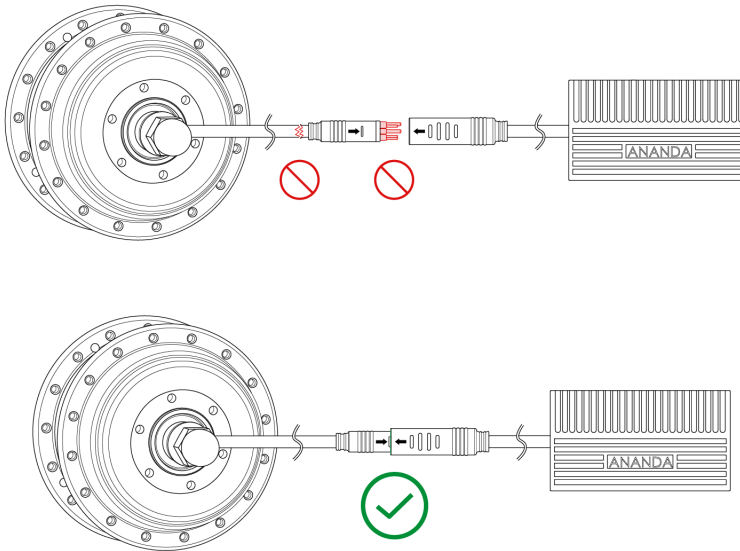

2. If the harness is connected correctly, replace the controller.
3. If the problem is not solved, replace the hubmotor.