

ANANDA

Help Manual

Motor Temperature

The content of this information is subject to change without notice

1. In case of any fault during operation under heavy load condition, stop running and cool down the hubmotor before normal operation.
2. Replace controller.
3. If the problem is not solved, replace the hubmotor.