

ANANDA

Help Manual

Communication Failure

The content of this information is subject to change without notice

1. Check whether the display harness and the controller connector are plugged in properly.
2. Check whether the display harness is damaged or crushed.
3. Replace the display.
4. If the problem is not solved, replace the controller.